

**RADIOACTIVE TYPE A LIQUIDS AND SOLIDS  
PACKAGING TESTS**



**AMMUNITION CONTAINER WITH  
2 x 10mL GLASS VIALS OR  
2 x 7mL PLASTIC VIALS  
(W-8 ROUND DESIGN) RADIOACTIVE PKG.**

**TEST REPORT #: 04-2073**

**TESTING PERFORMED FOR:**

**VULCAN LEAD INC.**  
1400 West Pierce Street  
Milwaukee, WI 53204

**ATTN: Matt Macur**

**TESTING PERFORMED BY:**

**TEN-E Packaging Services, Inc.**  
1666 County Road 74  
Newport, MN 55055  
**Phone:** (651) 459-0671  
**Fax:** (651) 459-1430

March 18, 2004

## TABLE OF CONTENTS

<b>Objective</b>	<b>3</b>
-Brief overview of the report and referenced regulatory sources	
<b>Test Sample Description</b>	<b>4-5</b>
-Specifications for the tested package provided by the client	
<b>Quality Control Audit Results</b>	<b>6-8</b>
-Complete audit of the tested package compiled by TEN-E Packaging Services, Inc.	
<b>Test Sample Preparation</b>	<b>9-10</b>
-Summary of sample preparation	
<b>Test Procedures and Results</b>	<b>11-22</b>
-Results of DOT/ICAO testing performed on the specified package by TEN-E Packaging Services, Inc.	
<b>Disclaimer of Warranties</b>	<b>23</b>
<b>Appendix I</b>	<b>24</b>
-Regulatory and Industry Standard References	

## REPORT & SAMPLE INFORMATION

**SAMPLES RECEIVED ON:** March 8, 2004

**TEST COMPLETED ON:** March 12, 2004

**SAMPLES:**

- The samples tested arrived in good condition at TEN-E Packaging Services, Inc.
- The following results are based solely on the product samples provided by the manufacturer.

**THIS REPORT SHALL NOT BE REPRODUCED EXCEPT IN FULL WITHOUT THE WRITTEN PERMISSION OF TEN-E PACKAGING SERVICES, INC.**

## OBJECTIVE

To certify the **Vulcan Lead, Inc. ammunition container with 2 x 10mL glass vial for liquid radioactive material, or 2 x 7 mL plastic vial for solid radioactive material (W-8 Round Design)**, to the Radioactive Type A Performance Tests outlined in the following Regulatory Codes:

- 2003 edition of the Department of Transportation Title 49 Code of Federal Regulations:
  - 173.410 General Design Requirements
  - 173.412 Additional Design Requirements for Type A Packages
  - 173.415 Authorized Type A Packages
  - 173.465 Type A Packaging Tests
- 2003-04 edition of the ICAO Technical Instructions for the Safe Transport of Dangerous Goods by Air
- 45th edition of the IATA Dangerous Goods Regulations

This package is also certified for shipment under the International Regulatory Codes referenced in Appendix I. However, it is the responsibility of the shipper (end user) to determine package authorization for use under these hazardous materials regulations. Appendix I also references Industry Standards used in conducting this certification.

**TEST SAMPLE DESCRIPTION****Ammunition Container with 2 x Inner Primary Containers (W-8 Round Design)****PRIMARY RECEPTACLE, OPTION #1****VIAL****DESCRIPTION:**

10mL Glass Vial with 20mm Stopper and Seal

**MATERIAL:**

Flint Glass Vial with Gray Rubber Stopper and Aluminum Seal

**DIMENSIONS:** Not Provided**SUPPLIER / MANUFACTURER:**

Not Provided

**PRIMARY RECEPTACLE, OPTION #2****VIAL****DESCRIPTION:**

Plastic Vial with 15mm Friction Fit Plug

**MATERIAL:**

Natural/Clear Vial with Blue Low Density Polyethylene Plug

**DIMENSIONS:** Not Provided**SUPPLIER / MANUFACTURER:**

Not Provided

**SECONDARY RECEPTACLE****CONTAINER (W-8 ROUND)****DESCRIPTION:**

2-Piece Threaded Container with Top Handle

**MATERIAL:** Stainless Steel, Lead**TARE WEIGHT:** 7.4 Lbs.**DIMENSIONS:**

2.75" OD x 4.13" Shoulder Ht. x 4.50" Overall Ht.

**O-RING:**

Glued-In (PL-400 Constuction Adhesive) Black Buna-N

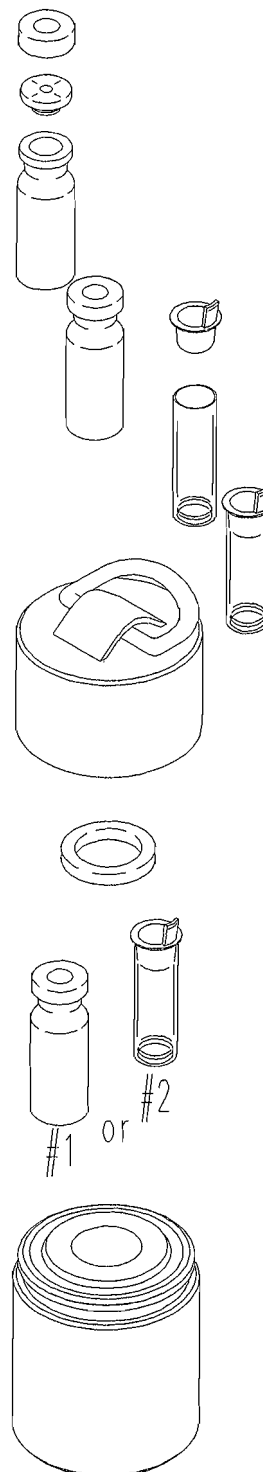
Rubber O-Ring, 0.210" Thick x 1.475" ID

(Parker 2-325-NO674-70)

**SUPPLIER / MANUFACTURER:**

Raphael Industries, Drawing No. FA14099

- **Body:** 14098-13, 300 Series STS
- **Cap:** W14098-01
- **Lead Body:** 14098-03
- **Lead Cap:** 14098-05
- **O-Ring:** 14047-11

*Contact packaging manufacturer for specifications.*

## TEST SAMPLE DESCRIPTION

### Ammunition Container with 2 x Inner Primary Containers (W-8 Round Design)

#### CUSHIONING

**DESCRIPTION:**

Laminated Top and Bottom Foam Pads, cut to fit inside dimensions of the steel ammunition box

**MATERIAL:**

Black Polyethylene Foam

**DENSITY:**

1.7 g/cc

**TARE WEIGHT:**

Not Provided

**DIMENSIONS:**

Not Provided

**SUPPLIER / MANUFACTURER:**

New Day Packaging

#### CONTAINER

**DESCRIPTION:**

Steel Ammunition Box with Hinged Cover, Rubber Seal and Latch

**MATERIAL:**

Steel

**THICKNESS:**

Not Provided

**TARE WEIGHT:**

Not Provided

**OVERALL DIMENSIONS:**

- **Length:** Not Provided
- **Width:** Not Provided
- **Height:** Not Provided

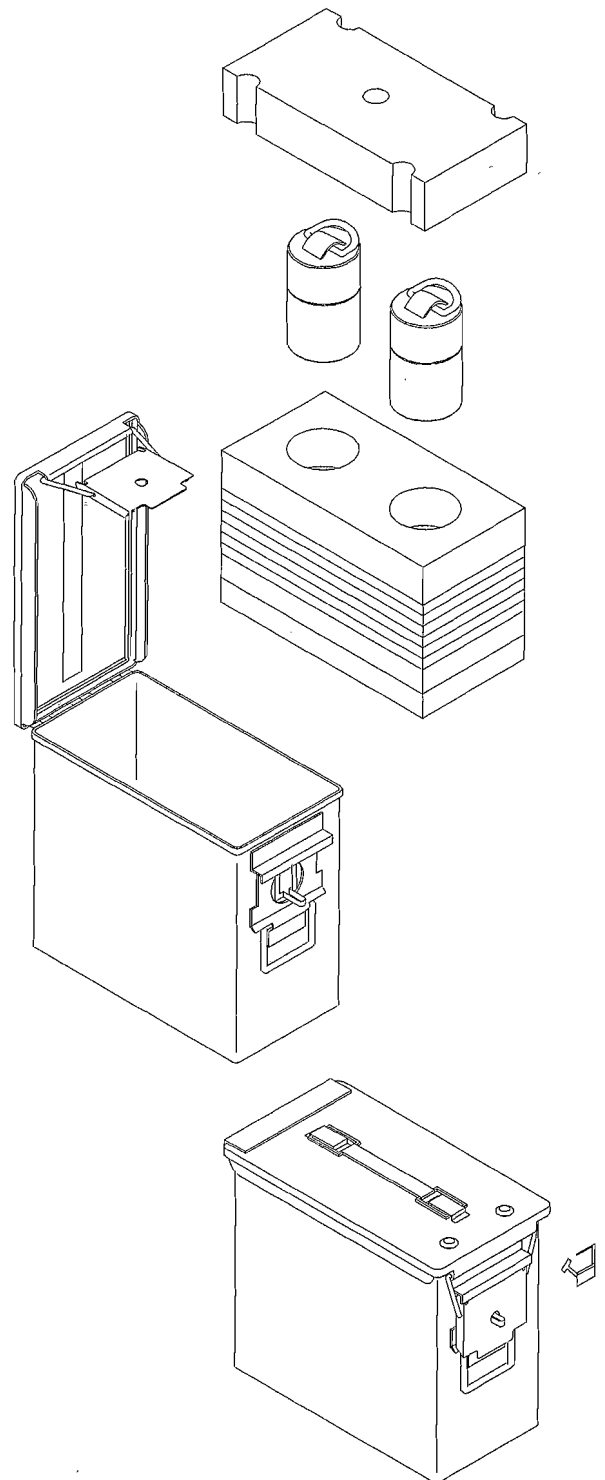
**GASKET:** Not Provided

**SECUREMENT METHOD:**

Gray Plastic Clip Seal

**SUPPLIER / MANUFACTURER:**

Not Provided



*Contact packaging manufacturer for specifications.*

**QUALITY CONTROL AUDIT RESULTS**

The following audits were performed by TEN-E Packaging Services to document the packaging design.

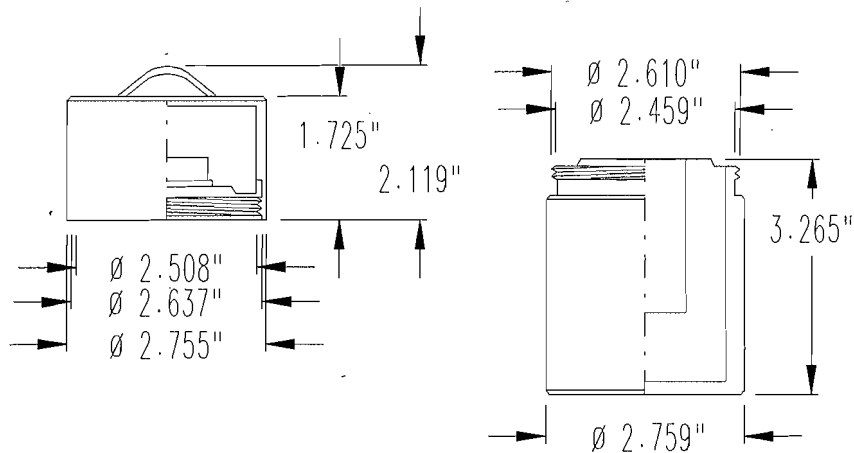
PRIMARY RECEPTACLE OPTION #1		
<b>CRIMP</b>		
• <b>Description:</b>	20mm Aluminum Crimp	
• <b>Tare Weight:</b>	0.38 Grams	• <b>Thickness:</b> 0.008"
<b>CLOSURE</b>		
• <b>Description:</b>	20mm Friction Fit Stopper	
• <b>Material:</b>	Rubber; Gray	• <b>Tare Weight:</b> 1.58 Grams
<b>VIAL</b>		
• <b>Description/Material:</b>	10mL Round Flint Glass Vial	• <b>Tare Weight:</b> 10.24 Grams
• <b>Overflow Capacity:</b>	13.27mL (0.449 Ounces)	
• <b>98% Overflow:</b>	13.01mL (0.440 Ounces)	
• <b>Min. Wall Thickness:</b>	0.034", Bottom Head	• <b>Markings:</b> None
PRIMARY RECEPTACLE OPTION #2		
<b>CRIMP</b>		
• <b>Description:</b>	15mm Friction Fit Plug	
• <b>Material/Pigment:</b>	Low Density Polyethylene, Blue	• <b>Density:</b> 0.917 g/cc
• <b>Tare Weight:</b>	0.62 Grams	• <b>Markings:</b> PMI Erie PA 17 6
<b>VIAL</b>		
• <b>Description Material:</b>	Round Natural/Clear Plastic Vial	• <b>Density:</b> 1.646 g/cc
• <b>Tare Weight:</b>	1.65 Grams	
• <b>Overflow Capacity:</b>	7.73mL (0.261 Ounces)	
• <b>98% Overflow:</b>	7.57mL (0.256 Ounces)	
• <b>Min. Wall Thickness:</b>	0.016", Sidewall	• <b>Markings:</b> None
<b>Overall Dimensions</b>		
<div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;"> <p>Option #1</p> </div> <div style="text-align: center;"> <p>Option #2</p> </div> </div>		

QUALITY CONTROL AUDIT RESULTS

SECONDARY RECEPTACLES

• Description:	(2) 2-Piece Threaded Container with Top Handle
• Material/Pigment:	Stainless Steel Outer Shell with Inner Lead Body
• Tare Weight:	Top: 1,113 Grams Bottom: 2,596 Grams
• O-Ring:	Black Rubber O-Ring Glued-In, 2.83 Grams x 0.210" Diameter
• Markings:	None

Overall Dimensions



<b>QUALITY CONTROL AUDIT RESULTS</b>
--------------------------------------

<b>INTERIOR COMPONENTS</b>	
----------------------------	--

• <b>Description:</b>	Top Pad with Finger Holes
• <b>Material:</b>	Black Polyethylene Foam
• <b>Tare Weight:</b>	62 Grams
• <b>Dimensions:</b>	5-1/2" x 10-3/4" x 2-1/4"
• <b>Description:</b>	Laminated Bottom Foam Pad
• <b>Material:</b>	Black Polyethylene Foam
• <b>Tare Weight:</b>	219 Grams (foam only)
• <b>Dimensions:</b>	5-1/2" x 10-3/4" x 7-1/4" with (2) 2-3/4" Diameter Holes

<b>CONTAINER ASSEMBLY</b>							
---------------------------	--	--	--	--	--	--	--

• <b>Description:</b>	Ammunition Box with Hinged Top Cover with Handle and Crimped-In Black Rubber Gasket, Front Latch with Handle						
• <b>Material:</b>	Steel						
• <b>Finish:</b>	<b>Exterior:</b>	Gray					
	<b>Interior:</b>	Gray					
• <b>Tare Weight:</b>	2,748 Grams (with Bottom Foam Insert)						
• <b>Wall Thickness:</b>	<b>Cover:</b>	<b>1.)</b>	0.0466"	<b>2.)</b>	0.0465"	<b>3.)</b>	0.0465"
	<b>Sidewall:</b>	<b>1.)</b>	0.0307"	<b>2.)</b>	0.0303"	<b>3.)</b>	0.0301"
	<b>Bottom:</b>	<b>1.)</b>	0.0300"	<b>2.)</b>	0.0304"	<b>3.)</b>	0.0304"
• <b>Dimensions:</b>	<b>Cover:</b>	6-1/8"x 11-3/4" x 1-1/4"					
	<b>Box:</b>	5-3/4"x 12"x 9-13/16"					
	<b>Overall Height:</b>	10-3/8"					
• <b>Markings:</b>	CONT PA 19 S.C.F.						
• <b>Securement Method:</b>	Gray Polypropylene Plastic Locking Seal,						
	Tare Weight: 1.46 Grams						
	Markings: SPI "5" PP Pat 4506921 Seal 0160269 EJ Brooks Co						



**SAMPLE PREPARATION****Ammunition Container with an 2 x Primary Containers (W-8 Round Design)****PACKAGE WEIGHT & SAMPLE PREPARATION INFORMATION – FOR THE 10mL GLASS VIAL PKG.**

<b>FILLING SUBSTANCE:</b>	<ul style="list-style-type: none"> <li>• Water</li> <li>• Anti-freeze used for the Thermal Shock Test</li> </ul>		
<b>NET FILL WEIGHT:</b>	<ul style="list-style-type: none"> <li>• 12.7 Grams Per Vial</li> </ul>		
<b>PACKAGE TEST WEIGHT:</b>	<ul style="list-style-type: none"> <li>• 10.5 Kg (23.1 Lbs.)</li> </ul>		
<b>RECEPTACLE CLOSURE METHODS:</b>			
<b>-10mLGLASS VIAL:</b>	<ul style="list-style-type: none"> <li>• Crimped Closure</li> </ul>		
<b>CLOSURE METHOD (SHIPPER):</b>	<ul style="list-style-type: none"> <li>• Latched and Plastic Security Device</li> </ul>		
<b>SAMPLE SIZE:</b>	<ul style="list-style-type: none"> <li>• 5 Complete Package Assemblies Used to Complete the Test Program</li> </ul>		
<b>TEST</b>	<b>SAMPLE ID:</b>	<b>FILLING SUBSTANCE:</b>	<b>CONDITIONING:</b>
<b>Vibration (Repetitive Shock)</b>	1	Water	Ambient
<b>Vibration (Sweep)</b>	1	Water	Ambient
<b>Thermal Shock</b>	2	Anti-Freeze	-40°C (-40°F) for Four (4) Hours and 70°C (158°F) for Four (4) Hours
<b>Pressure Differential</b>	1	Water	Ambient
<b>Internal Pressure</b>	1	Water	Ambient
<b>Water Spray &amp; 1.2 Meter Drop</b>	2	Water	Ambient
<b>Water Spray &amp; Stacking</b>	3	Water	Ambient
<b>Water Spray &amp; Penetration</b>	1	Water	Ambient
<b>Water Spray &amp; 9.0 Meter Drop</b>	4	Water	Ambient
<b>Water Spray &amp; Penetration</b>	5	Water	Ambient

Specifications for test contents are on file with TEN-E Packaging Services, Inc.

**EQUIPMENT**

All inspection, measuring and test equipment that can affect product quality is calibrated and adjusted at prescribed intervals, or prior to use, and is traceable to NIST, using ANSI Z540 as an overall guide for calibration certification.

**SAMPLE PREPARATION****Ammunition Container with an Inner Primary Container (W-8 Round Design)**

PACKAGE WEIGHT & SAMPLE PREPARATION INFORMATION – FOR THE 7mL PLASTIC VIAL PKG.			
<b>FILLING SUBSTANCE:</b>		<ul style="list-style-type: none"> <li>• 3 x Capsules</li> <li>• Water used for the Pressure Differential Test</li> <li>•</li> </ul>	
<b>NET FILL WEIGHT:</b>		• 1.4 Grams Per Vial (3 x Capsules Per Vial)	
<b>PACKAGE TEST WEIGHT:</b>		• 10.5 Kg (23.1 Lbs.)	
<b>RECEPTACLE CLOSURE METHODS:</b>			
<b>-7mL PLASTIC VIAL:</b>		• Friction-Fit Plug	
<b>CLOSURE METHOD (SHIPPER):</b>		• Latched and Plastic Security Device	
<b>SAMPLE SIZE:</b>		• 3 Complete Package Assemblies Used to Complete the Test Program	
TEST	SAMPLE ID:	FILLING SUBSTANCE:	CONDITIONING:
Vibration (Repetitive Shock)	1	Capsules	Ambient
Vibration (Sweep)	1	Capsules	Ambient
Thermal Shock	2	Capsules	-40°C (-40°F) for Four (4) Hours and 70°C (158°F) for Four (4) Hours
Pressure Differential	1	Water	Ambient
Water Spray & 1.2 Meter Drop	2	Capsules	Ambient
Water Spray & Stacking	3	Capsules	Ambient
Water Spray & Penetration	1	Capsules	Ambient

Specifications for test contents are on file with TEN-E Packaging Services, Inc.

**EQUIPMENT**

All inspection, measuring and test equipment that can affect product quality is calibrated and adjusted at prescribed intervals, or prior to use, and is traceable to NIST, using ANSI Z540 as an overall guide for calibration certification.

**GENERAL REQUIREMENTS - REPETITIVE SHOCK VIBRATION TEST****SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**FREQUENCY:**

- 4.3 Hz

**TABLE DISPLACEMENT:**

- 1"

**TEST DURATION:**

- 1 Hour

**VIBRATION TEST EQUIPMENT:**

- LAB Model 6000 Transportation simulator

**TEST ORIENTATION:**

- Base

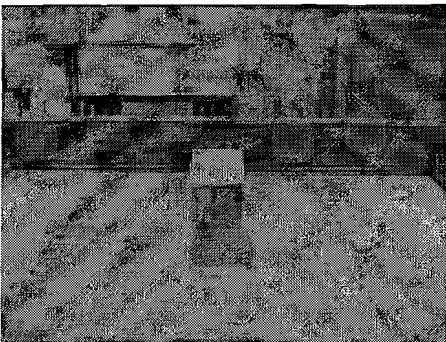
**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**VIBRATION (SHOCK) TEST SET-UP & RESULTS****CRITERIA FOR PASSING**

	Sample #	No Loss/Dispersal of Contents	No deterioration of the effectiveness of the closing device(s)
	1 (Liquids)	Pass	Pass
	1 (Solids)	Pass	Pass

**COMMENTS / OBSERVATIONS**

No visible damage evident to the interior or exterior of the sample.

**CRITERIA FOR PASSING THE VIBRATION TEST**

The package must be capable of withstanding the effects of any acceleration, vibration or vibration resonance which may arise under conditions likely to be encountered in routine transport without any deterioration in the effectiveness of the closing devices on the various receptacles or in the integrity of the package as a whole.

**GENERAL REQUIREMENTS - FREQUENCY SWEEP VIBRATION TEST**

**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**INPUT ACCELERATION:**

- 0.5 g

**VIBRATION TEST EQUIPMENT:**

- L.A.B. PTV 48 Vibration Test System

**REGULATORY REFERENCES:**

- Refer to Appendix I

**FREQUENCY SWEEP RANGE & RATE:**

- 3.0 Hz – 200.0 Hz – 3.0 Hz / 0.5 Octave/Minute

**TEST DURATION:**

- 1 Hour

**TEST ORIENTATION:**

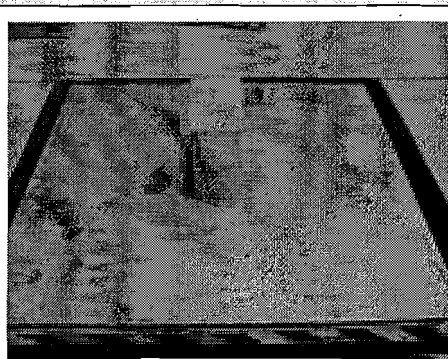
- Base

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**VIBRATION (FREQUENCY SWEEP) TEST SET-UP & RESULTS**

**CRITERIA FOR PASSING**



Sample #	No Loss/Dispersal of Contents	No deterioration of the effectiveness of the closing device(s)
1 (Liquids)	Pass	Pass
1 (Solids)	Pass	Pass

**COMMENTS / OBSERVATIONS**

No visible damage evident to the interior or exterior of the sample.

**CRITERIA FOR PASSING THE VIBRATION TEST**

The package must be capable of withstanding the effects of any acceleration, vibration or vibration resonance which may arise under conditions likely to be encountered in routine transport without any deterioration in the effectiveness of the closing devices on the various receptacles or in the integrity of the package as a whole.

**GENERAL REQUIREMENTS - THERMAL SHOCK TEST****SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**TEST DURATION:**

- Eight (8) Hours Total

**TEST EQUIPMENT:**

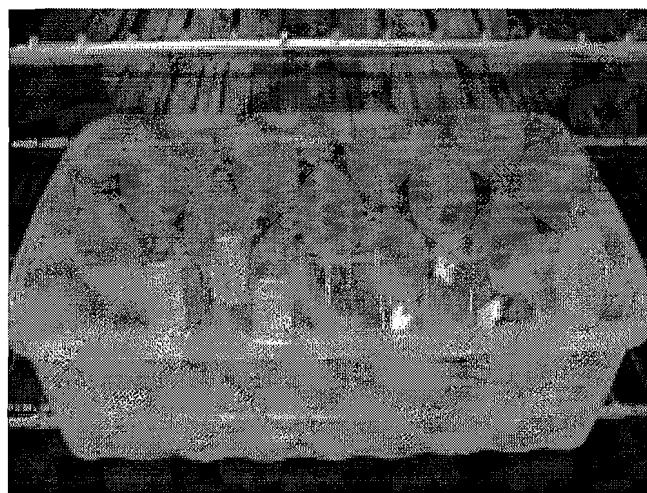
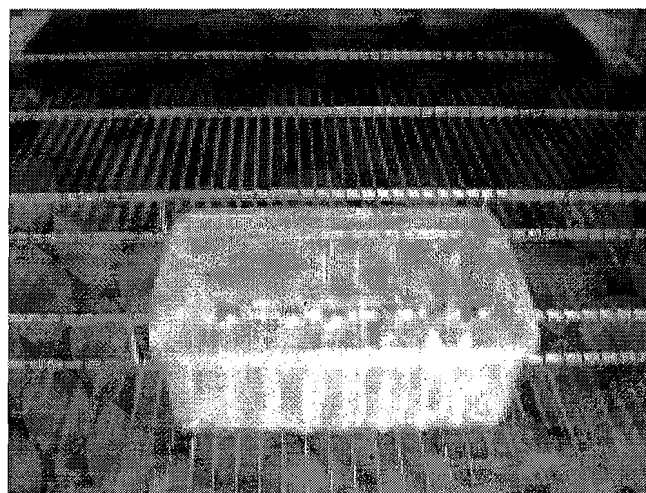
- Thermotron Chamber (#242)
- Cincinnati Chamber (#241)

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**THERMAL SHOCK TEST SET-UP & RESULTS****COMMENTS / OBSERVATIONS**

Sample #	-40°C	70°C
2 (10mL Glass Vial Primary Receptacle)	No visual degradation of the packaging components following four (4) hour test at -40°C. No leakage of contents evident.	No visual degradation of the packaging components following four (4) hour test at +70°C. No leakage of contents evident.
2 (7mL Plastic Vial Primary Receptacle)	No visual degradation of the packaging components following four (4) hour test at -40°C. No leakage of contents evident.	No visual degradation of the packaging components following four (4) hour test at +70°C. No leakage of contents evident.

**CRITERIA FOR PASSING THE THERMAL SHOCK TEST**

The component(s) of the package must be able to withstand temperatures ranging from -40°C to 70°C without degradation of materials within these given temperature ranges.

**GENERAL REQUIREMENTS - PRESSURE DIFFERENTIAL TEST****SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**TEST DURATION:**

- 5 Minutes

**REGULATORY REFERENCES:**

- Refer to Appendix I

**TEST PRESSURE:**

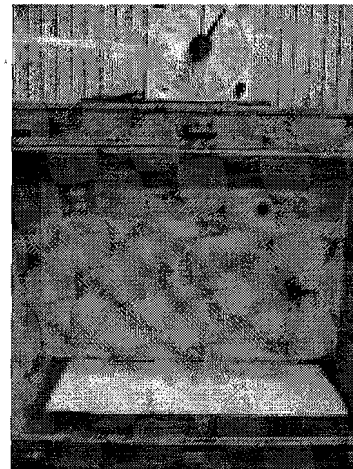
- 18 In.-Hg (60 kPa / 8.7 psi)

**TEST EQUIPMENT:**

- Tenney 6S Vacuum Chamber (#618)
- McDaniel Dial Pressure Gauge (#612)

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**PRESSURE DIFFERENTIAL TEST SET-UP & RESULTS**

Sample #	Result	COMMENTS / OBSERVATIONS
1 (10mL Glass Vial Primary Receptacle)	Pass	The sample maintained the 60 kPa test pressure for 5 minutes without leakage. There was no leakage evident from the vial (primary receptacle).
1 (7mL Plastic Vial Primary Receptacle & Secondary Receptacle)	Pass	The sample maintained the 60 kPa test pressure for 5 minutes without leakage. There was no leakage evident from the vial (primary receptacle).

**CRITERIA FOR PASSING THE PRESSURE DIFFERENTIAL TEST**

The containment system must retain its radioactive contents under a pressure differential test at 60 kPa.

**AIR TRANSPORTATION REQUIREMENTS - INTERNAL PRESSURE TEST****SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**TEST DURATION:**

- 5 Minutes

**REGULATORY REFERENCES:**

- Refer to Appendix I

**TEST PRESSURE:**

- 28 In.-Hg (95 kPa / 13.8 psi)

**TEST EQUIPMENT:**

- Tenney 6S Vacuum Chamber (#618)
- McDaniel Dial Pressure Gauge (#612)

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**INTERNAL PRESSURE TEST SET-UP & RESULTS**

Sample #	Result	COMMENTS / OBSERVATIONS
1 (10mL Glass Vial Primary Receptacle)	Pass	The sample maintained the 95 kPa test pressure for 5 minutes without leakage. There was no leakage evident from the vial (primary receptacle).

**CRITERIA FOR PASSING THE PRESSURE DIFFERENTIAL TEST**

The containment system must retain its radioactive contents under a pressure differential test at 95 kPa.



**TESTS FOR DEMONSTRATING ABILITY TO WITHSTAND NORMAL  
CONDITIONS OF TRANSPORT -- WATER SPRAY & 1.2-METER FREE DROP TEST  
10mL GLASS VIAL PACKAGING (FOR LIQUIDS)**

**WATER SPRAY TEST (SAMPLE PKG: #2)**

**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**TEST DURATION:**

- 1 Hour

**RAINFALL EXPOSURE:**

- Required Rainfall Exposure: 50mm (2.0")/hour (approximately)
- Actual Rainfall Exposure: 50mm (2.0")/hour

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**1.2 METER FREE DROP TEST (SAMPLE PKG: #2)**

**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**PRECONDITIONING:**

- Within 15 minutes of the Water Spray Test, the test sample was subjected to the Free Drop Test

**DROP ORIENTATION:**

- Top Corner

**DROP HEIGHT:**

- 1.2 m (47.3")

**DROP TEST EQUIPMENT:**

- L.A.B. ACCU-Drop 160



**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**WATER SPRAY AND 1.2-METER FREE DROP TEST SET UP & RESULTS**

DROP ORIENTATION	OVERALL CONTAINER HEIGHT			CRITERIA FOR PASSING	
	Prior to Drop	Following Drop	Total Change	No Loss/Dispersal of Contents	<20% Increase in Radiation level at any external surface
TOP CORNER	10.00"	10.00"	0.00"	PASS	*Not Determined
WATER SPRAY SET-UP		DROP SET-UP		COMMENTS / OBSERVATIONS:	
				No evidence of loss or dispersal of the contents. No damage evident to the inner components. Minimal deformation evident at the impact corner.	

**CRITERIA FOR PASSING THE TYPE A RADIOACTIVE PACKAGE PERFORMANCE TESTS**

- 1) \*No loss of shielding integrity which would result in more than a 20 % increase in the radiation level at any external surface of the package (*\*This criteria for passing must be determined by the person shipping the radioactive material, based on the comments and the observations noted above*).
- 2) No loss or dispersal of the radioactive contents.



**TESTS FOR DEMONSTRATING ABILITY TO WITHSTAND NORMAL  
CONDITIONS OF TRANSPORT -- WATER SPRAY & 1.2-METER FREE DROP TEST  
7mL PLASTIC VIAL PACKAGING (FOR SOLIDS)**

**WATER SPRAY TEST (SAMPLE PKG: #2)**

**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**TEST DURATION:**

- 1 Hour

**RAINFALL EXPOSURE:**

- Required Rainfall Exposure: 50mm (2.0")/hour (approximately)
- Actual Rainfall Exposure: 50mm (2.0")/hour

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**1.2 METER FREE DROP TEST (SAMPLE PKG: #2)**

**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**PRECONDITIONING:**

- Within 15 minutes of the Water Spray Test, the test sample was subjected to the Free Drop Test

**DROP ORIENTATION:**

- Top Corner

**DROP HEIGHT:**

- 1.2 m (47.3")

**DROP TEST EQUIPMENT:**

- L.A.B. ACCU-Drop 160



**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**WATER SPRAY AND 1.2-METER FREE DROP TEST SET UP & RESULTS**

DROP ORIENTATION	OVERALL CONTAINER HEIGHT			CRITERIA FOR PASSING	
	Prior to Drop	Following Drop	Total Change	No Loss/Dispersal of Contents	<20% Increase in Radiation level at any external surface
TOP CORNER	10.00"	10.00"	0.00"	PASS	*Not Determined
WATER SPRAY SET-UP		DROP SET-UP		COMMENTS / OBSERVATIONS:	
				No evidence of loss or dispersal of the contents. No damage evident to the inner components. Minimal deformation evident at the impact corner.	

**CRITERIA FOR PASSING THE TYPE A RADIOACTIVE PACKAGE PERFORMANCE TESTS**

- 1) \*No loss of shielding integrity which would result in more than a 20 % increase in the radiation level at any external surface of the package (*\*This criteria for passing must be determined by the person shipping the radioactive material, based on the comments and the observations noted above*).
- 2) No loss or dispersal of the radioactive contents.

**TESTS FOR DEMONSTRATING ABILITY TO WITHSTAND NORMAL  
CONDITIONS OF TRANSPORT -- WATER SPRAY & STACKING TEST  
CONDUCTED FOR BOTH THE LIQUIDS & SOLIDS PACKAGING****WATER SPRAY TEST (SAMPLE PKG: #3)****SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**TEST DURATION:**

- 1 Hour

**RAINFALL EXPOSURE:**

- Required Rainfall Exposure: 50mm (2.0")/hour (approximately)
- Actual Rainfall Exposure: 50mm (2.0")/hour

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**STACKING TEST (SAMPLE PKG: #3)****SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**PRECONDITIONING:**

- Within 15 minutes of the Water Spray Test, the test sample was subjected to the 24-Hour Stacking Test

**ACTUAL TOP LOAD APPLIED:**

- 200.0 Lbs. (90.7 Kg)

**MINIMUM REQUIRED TOP LOAD APPLICATION:**

- The Equivalent of 13 kPa (2 psi) multiplied by the vertically projected area of the package
- $(11.75" \times 6") \times 2 \text{ psi} = 141.0 \text{ Lbs. (63.9 Kg)}$

**TEST DURATION:**

- 24 Hours

**DROP TEST EQUIPMENT:**

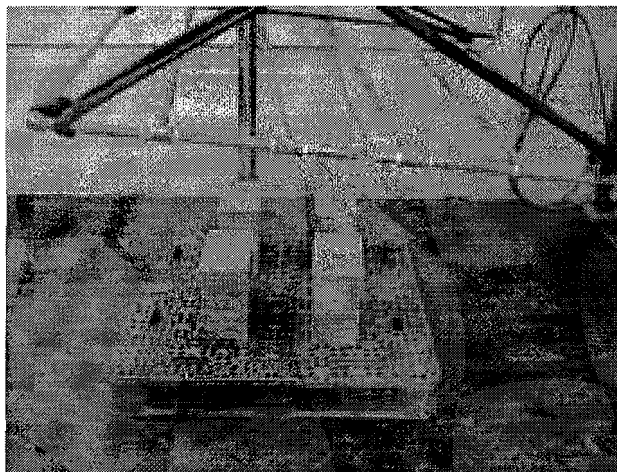
- Dead Load Steel Weights

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**WATER SPRAY & STACKING TEST SET-UP & RESULTS**

Refer to the following page for the Water Spray & Stacking Test Results

**TESTS FOR DEMONSTRATING ABILITY TO WITHSTAND NORMAL  
CONDITIONS OF TRANSPORT -- WATER SPRAY & STACKING TEST (CONTINUED)  
CONDUCTED FOR BOTH THE LIQUIDS & SOLIDS PACKAGING**

WATER SPRAY AND STACKING TEST RESULTS				
TOP-TO-BOTTOM DEFLECTION MEASUREMENTS			CRITERIA FOR PASSING	
Prior to Stacking	Following Stacking	Total Change	No Loss/Dispersal of Contents	<20% Increase in radiation level at any external surface
(1)* 10.00"	(1) 10.00"	(1) 0.00"	PASS	**Not Determined
(2)* 10.00"	(2) 10.00"	(2) 0.00"		
(3)* 10.00"	(3) 10.00"	(3) 0.00"		
(4)* 10.00"	(4) 10.00"	(4) 0.00"		
COMMENTS:		* (1) Measurements taken at the right front corner of the shipping carton * (2) Measurements taken at the left front corner of the shipping carton * (3) Measurements taken at the right back corner of the shipping carton * (4) Measurements taken at the left back corner of the shipping carton No damage noted to any components. No leakage of contents.		

**CRITERIA FOR PASSING THE TYPE A RADIOACTIVE PACKAGE PERFORMANCE TESTS**

- 1) \*\*No loss of shielding integrity which would result in more than a 20 % increase in the radiation level at any external surface of the package (*\*This criteria for passing must be determined by the person shipping the radioactive material, based on the comments and the observations noted above*).
- 2) No loss or dispersal of the radioactive contents.

**TESTS FOR DEMONSTRATING ABILITY TO WITHSTAND NORMAL  
CONDITIONS OF TRANSPORT -- WATER SPRAY & PENETRATION TEST  
CONDUCTED FOR BOTH THE LIQUIDS & SOLIDS PACKAGING**

**WATER SPRAY TEST (SAMPLE PKG: #1)**

**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**TEST DURATION:**

- 1 Hour

**RAINFALL EXPOSURE:**

- Required Rainfall Exposure: 50mm (2.0")/hour (approximately)
- Actual Rainfall Exposure: 50mm (2.0")/hour

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**PENETRATION TEST (SAMPLE PKG: #1)**

**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**PRECONDITIONING:**

- Within 15 minutes of the Water Spray Test, the test sample was subjected to the Penetration Test

**BAR DROP HEIGHT:**

- 1.0m (40.0")

**BAR SPECIFICATIONS:**

- Cylindrical Steel rod with a 32mm (1.25") Diameter with a hemispherical end, Rod Gross Mass: 6.0 Kg (13.2 Lbs.)

**REQUIRED AREA OF IMPACT:**



- Center of weakest part of the specimen.
- Center of a sidewall panel surface.

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

WATER SPRAY AND PENETRATION TEST			
DART PENETRATION		CRITERIA FOR PASSING	
DEPTH	PENETRATION THROUGH SIDEWALL	No Loss/Dispersal of Contents	<20% Increase in Radiation level at any external surface
N/A	No	PASS	*Not Determined
WATER SPRAY SET-UP		PENETRATION SET-UP	COMMENTS / OBSERVATIONS:
			No damage to the inner packaging. No leakage of contents.

**CRITERIA FOR PASSING THE TYPE A RADIOACTIVE PACKAGE PERFORMANCE TESTS**

- 1) \*No loss of shielding integrity which would result in more than a 20 % increase in the radiation level at any external surface of the package (*\*This criteria for passing must be determined by the person shipping the radioactive material, based on the comments and the observations noted above.*)
- 2) No loss or dispersal of the radioactive contents.

**ADDITIONAL TESTS FOR TYPE A PACKAGES DESIGNED FOR LIQUIDS OR GASES -- WATER SPRAY & 9.0-METER FREE DROP TEST (10mL GLASS VIAL PACKAGING)**
**WATER SPRAY TEST (SAMPLE PKG: #4)**
**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**TEST DURATION:**

- 1 Hour

**RAINFALL EXPOSURE:**

- Required Rainfall Exposure: 50mm (2.0")/hour (approximately)
- Actual Rainfall Exposure: 50mm (2.0")/hour

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**9.0 METER FREE DROP TEST (SAMPLE PKG: #4)**
**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**PRECONDITIONING:**

- Within 15 minutes of the Water Spray Test, the test sample was subjected to the Free Drop Test

**DROP ORIENTATION:**

- Top Corner

**DROP HEIGHT:**

- 9.0 m (30.0')

**DROP TEST EQUIPMENT:**

- Dropped Manually

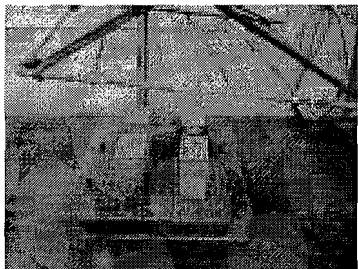

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**WATER SPRAY AND 9.0-METER FREE DROP TEST SET UP & RESULTS**

DROP ORIENTATION	OVERALL CONTAINER HEIGHT			CRITERIA FOR PASSING	
	Prior to Drop	Following Drop	Total Change	No Loss/Dispersal of Contents	<20% Increase in Radiation level at any external surface
TOP CORNER	10.00"	10.00"	0.00"	PASS	*Not Determined
WATER SPRAY SET-UP		DROP SET-UP		COMMENTS / OBSERVATIONS:	
				No evidence of loss or dispersal of the contents. No damage evident to the inner components. Deformation evident at the impact corner.	

**CRITERIA FOR PASSING THE TYPE A RADIOACTIVE PACKAGE PERFORMANCE TESTS**

- 1) \*No loss of shielding integrity which would result in more than a 20 % increase in the radiation level at any external surface of the package (*\*This criteria for passing must be determined by the person shipping the radioactive material, based on the comments and the observations noted above.*)
- 2) No loss or dispersal of the radioactive contents.

**ADDITIONAL TESTS FOR TYPE A PACKAGINGS DESIGNED FOR LIQUIDS AND GASES --  
WATER SPRAY & PENETRATION TEST (10mL GLASS VIAL PACKAGING)**
**WATER SPRAY TEST (SAMPLE PKG: #5)**
**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**TEST DURATION:**

- 1 Hour

**RAINFALL EXPOSURE:**

- Required Rainfall Exposure: 50mm (2.0")/hour (approximately)
- Actual Rainfall Exposure: 50mm (2.0")/hour

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

**PENETRATION TEST (SAMPLE PKG: #5)**
**SAMPLE PREPARATION/CONDITIONING:**

- Refer to Sample Preparation Page

**PRECONDITIONING:**

- Within 15 minutes of the Water Spray Test, the test sample was subjected to the Penetration Test

**BAR DROP HEIGHT:**

- 1.7m (5.5')

**BAR SPECIFICATIONS:**

- Cylindrical Steel rod with a 32mm (1.25") Diameter with a hemispherical end, Rod Gross Mass: 6.0 Kg (13.2 Lbs.)

**REQUIRED AREA OF IMPACT:**


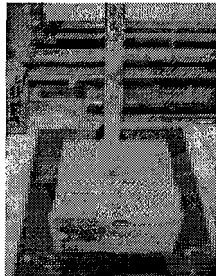
- Center of weakest part of the specimen.
- Center of a sidewall panel surface.

**REGULATORY REFERENCES:**

- Refer to Appendix I

**INDUSTRY STANDARD REFERENCE:**

- Refer to Appendix I

WATER SPRAY AND PENETRATION TEST			
DART PENETRATION		CRITERIA FOR PASSING	
DEPTH	PENETRATION THROUGH SIDEWALL	No Loss/Dispersal of Contents	<20% Increase in Radiation level at any external surface
N/A	No	PASS	*Not Determined
WATER SPRAY SET-UP		PENETRATION SET-UP	COMMENTS / OBSERVATIONS:
			No damage to the inner packaging. No leakage of contents.

**CRITERIA FOR PASSING THE TYPE A RADIOACTIVE PACKAGE PERFORMANCE TESTS**

- 1) \*No loss of shielding integrity which would result in more than a 20 % increase in the radiation level at any external surface of the package (*\*This criteria for passing must be determined by the person shipping the radioactive material, based on the comments and the observations noted above).*
- 2) No loss or dispersal of the radioactive contents.

**DISCLAIMER OF WARRANTIES**

**Package Description:**    **Ammunition Container with 2 x 10mL Glass Vial for Liquid Radioactive Materials, or 2 x 7mL Plastic Vial for Solid Radioactive Material (W-8 Round Design)**

**TEN-E PACKAGING SERVICES, INC.** certifies that the **Vulcan Lead, Inc. Type A Radioactive Packaging for Liquids** shown above has met the performance requirements for Type A Radioactive Packages as specified in Parts 173.410, 173.412, 173.415 & 173.465 of the Department of Transportation's Title 49 Code of Federal Regulations (2003 edition). In addition the package complies with the requirements set forth in the 2003-2004 edition of the ICAO Technical Instructions for the Safe Transport of Dangerous Goods by Air, and the 45<sup>th</sup> edition of the IATA Dangerous Goods Regulations.

ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY THAT THE PACKAGING TESTED IS MERCHANTABLE OR FIT FOR A PARTICULAR PURPOSE, ARE DISCLAIMED. In no event shall TEN-E Packaging Services, Inc. liability exceed the total amount paid for services rendered. In the event of future changes to the above referenced test standard, it is the responsibility of **Vulcan Lead, Inc.** to determine whether additional testing or updating of past testing is necessary to verify that the packaging we have tested remains in compliance with those standards.

  
Jim D. Loth  
Packaging Engineer  
TEN-E Packaging Services, Inc.



**APPENDIX I: REGULATORY STANDARD REFERENCES**

<b>REGULATORY REFERENCES</b>			
<b>TEST</b>	<b>49 CFR<sup>①</sup> 2003 Edition</b>	<b>ICAO<sup>②</sup> 03-04 Edition</b>	<b>IATA<sup>③</sup> 45th Edition</b>
<b>Vibration (Repetitive Shock):</b>	173.24a(a)(5) & 178.608	6; 7.1.7	10.5.3.7
<b>Vibration (Sweep):</b>	173.410(f)	6; 7.1.7	10.5.3.7
<b>Thermal Shock:</b>	173.410(i)(2) & 173.412(c)	6; 7.2.2 & 6; 7.6.5	10.5.3.11 & 10.6.2.1.1.4
<b>Pressure Differential:</b>	173.412(f)	6; 7.6.11	10.6.2.1.2.5
<b>Internal Pressure:</b>	173.410(i)(3)	6; 7.2.3	10.5.3.12
<b>Water Spray / 1.2 m Drop:</b>	173.465(b) & 173.465(c)	6; 7.14.3, 6; 7.13 & 6; 7.14.4	10.6.3.4.2, 10.6.3.3 & 10.6.3.4.3
<b>Water Spray / Stacking</b>	173.465(b) & 173.465(d)	6; 7.14.3 & 6; 7.14.5	10.6.3.4.2 & 10.6.3.4.4
<b>Water Spray &amp; 1 m Penetration</b>	173.465(b) & 173.465(e)	6; 7.14.3 & 6; 7.14.6	10.6.3.4.2 & 10.6.3.4.5
<b>Water Spray / 9 m Drop:</b>	173.465(b), 173.465(c)(5) & 173.466(a)(1)	6; 7.14.3, 6; 7.13 & 6; 7.15(a)	10.6.3.4.2, 10.6.3.3 & 10.6.3.5.1
<b>Water Spray &amp; 1.7 m Penetration</b>	173.465(b) & 173.466(a)(2)	6; 7.14.3 & 6; 7.15(b)	10.6.3.4.2 & 10.6.3.5.2

① United States Department of Transportation Code of Federal Regulations (CFR) Title 49, Transportation, Parts 100-199

② Technical Instructions for the Safe Transport of Dangerous Goods by Air (ICAO)

③ International Air Transport Association (IATA) Dangerous Goods Regulations